
Operating Instructions 7 Day Digital Timer Model 1529 with 3 Programmable Settings



Feel the drive

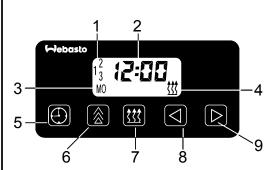

- 1 Program number for preset time
- 2 Time of day / preset time / operating duration display
- 3 Day of the week display
- 4 Operation indicator
- 5 Setting / viewing the time; setting / recalling day of the week
- 6 Presetting / recalling starting time: setting / recalling day of the week
- 7 Heater On/Off
- 8 Reverse key for setting time of day or heater start-up time; viewing and reducing operating duration / remaining operating time
- 9 Forward key for setting time of day or heater start-up time; presetting day of start-up; viewing and extending operating duration / remaining operating time

General

The 7 day timer with 3 time settings enables you to preset the start of the heater operation up to 7 days in advance. It is possible to program 3 different starting times, only one of which can be activated at any one time and one event (desired programmed event must be initiated each time required).

When the ignition is switched on, the timer displays the current time and day of the week. When the heater is switched on, the display and buttons are illuminated.

After the power supply has been connected, all symbols on the display will flash. The current time and weekday must be set.

Operation

The timer can be operated in that all flashing symbols can be adjusted by means of the \(\blacktriangle \) and \(\blacktriangle \) buttons.

If no adjustments are made within 5 seconds, the current setting displayed will be stored in memory. If the \(\bar{\bar} \) and \(\bar{\bar} \) buttons are pressed for more than 2 seconds, the fast time-setting mode is activated.

If the ignition is switched off while the heater is operating in the continuous mode, the remaining operating time of 15 minutes is displayed and the heater continues to operate for this period of time.

Whenever power supply is disconnected, all programmed settings will be lost.

Switching the heater on	Manually: by pressing the button (continuous heating mode). Automatically: by programming the heater starting time. The button will be illuminated during operation.
Switching the heater off	Manually: by pressing the button. Automatically: after the programmed operating time has elapsed. With the heater running: by programming the remaining operating time. The button light and operation indicator will extinguish.
Setting time/ day of the week	Press the button for more than 2 seconds - time of the day is flashing - and set the clock using the and buttons. Day of the week is flashing - adjust the day of the week.
Viewing the time	With the ignition switched off: press the button.
Programming heater starting time	Press the button - the memory location is flashing - using the and buttons, set start of the heater operating time. Day of the week is flashing - set the day of the week. By repeatedly pressing the button, memory locations 2 and 3 can be programmed or the time display mode can be reached.
Recalling/ erasing preset times	Repeatedly press the button until the desired memory location is displayed. To erase the preset time, press the button several times until the time of the day is displayed instead of the memory location.
Programming duration of operating time	The heater must be switched off. Press and hold the dutton for 3 seconds - operating time is flashing - and set the desired operating time (10 to 120 minutes) using the and buttons.
Setting the remaining operating time	Set the desired remaining operating time (1 to 120 minutes) using the and buttons. The remaining operating time refers to the time the heater still continues to remain in operation. It can only be changed while the heater is in operation and the ignition is switched off.
⇔ ebasto	Technical Assistance Hotline

Feel the drive

Webasto Product N.A., Inc.

15083 North Road Fenton, MI 48430

USA: 1-800-555-4518 1-800-667-8900 Canada:

www.webasto.us

P/N 907108 Rev. 03/2004