


Auxiliary heater B2L*, with programmable timer,

from April 1992

Relay location

For relay location and multiple connectors see also section "component locations".

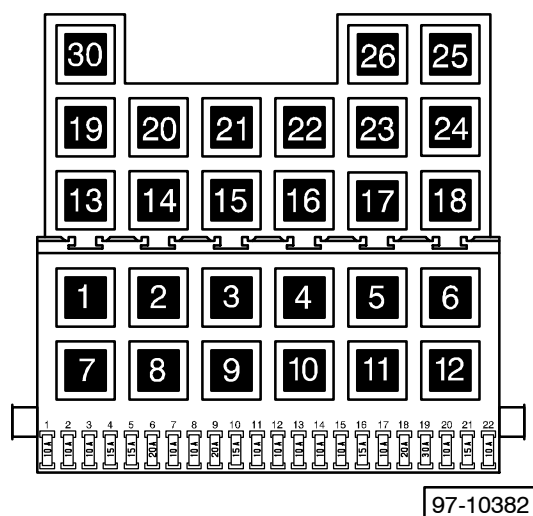


Fuse colors

30A – green
25A – white
20A – yellow
15A – blue
10A – red

* Type 20168901, see identification plate

30	30
15	15
X	X
31	31

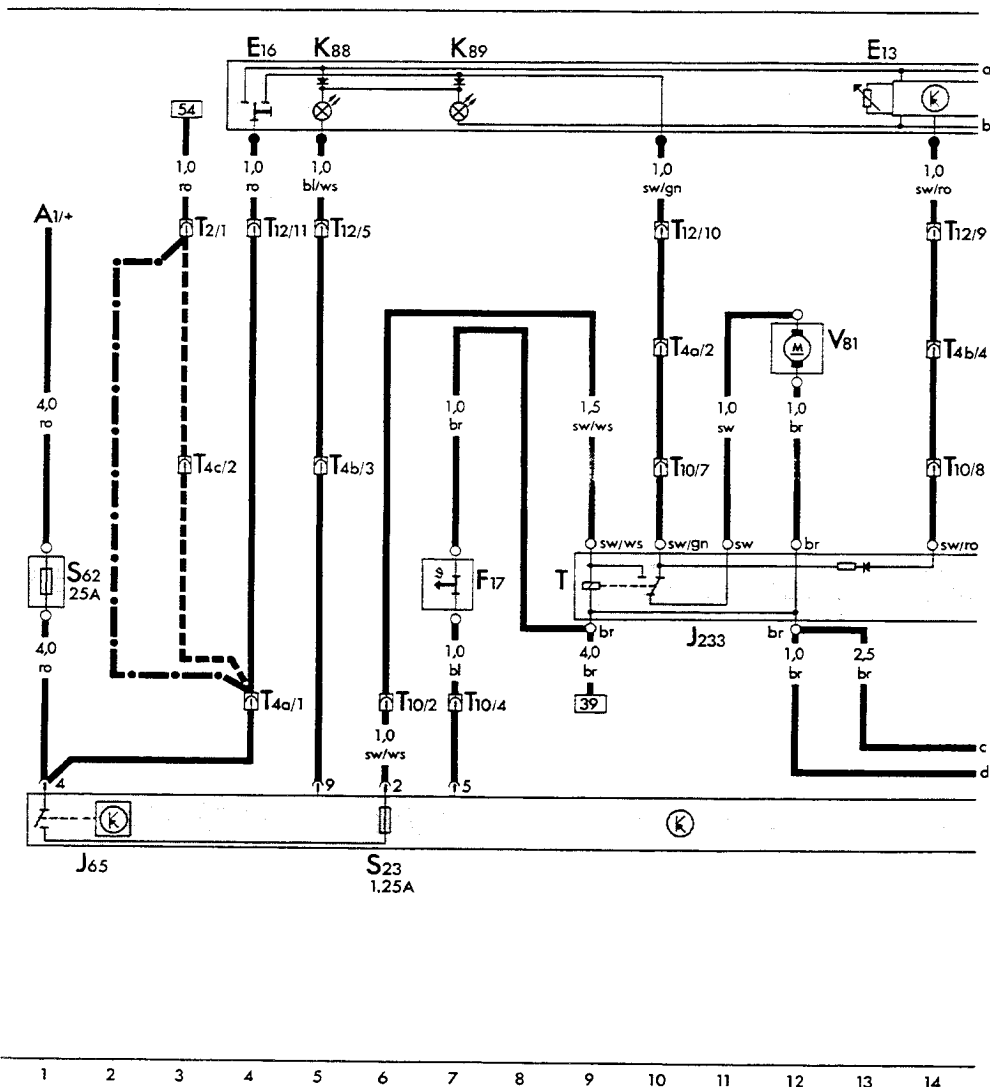


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

97-10044

- A1 - Auxiliary Battery
- E13 - Heater-Time Temperature Control Switch, on left B-pillar, upper part
- E16 - Heater/Heat Output Switch
- F17 - Heater Overheat Control Switch
- J65 - Heater Control Module, below driver's seat*
- J233 - Auxiliary Heater Blower Relay
- K88 - Water Heater Malfunction Light (red)
- K89 - Water Heater On Light (green)
- S23 - Heater Fuse
- S62 - Auxiliary Heater Fuse, below driver's seat**
- T - Junction Box
- T2 - Double Connector, below driver's seat*
- T4a - 4-Pin Connector, below driver's seat*
- T4b - 4-Pin Connector, below driver's seat*
- T4c - 4-Pin Connector, below driver's seat*
- T10 - 10-Pin Connector, below driver's seat*
- T12 - 12-Pin Connector, behind left B-pillar trim, upper part
- V81 - Fresh Air/Heater Blower
- * - Located behind lower part of left B-pillar trim on vehicles with swivel seat
- ** - Located on lower part of left B-pillar on vehicles with swivel seat
- (with 3 dots) - "Camper" only
- (with 2 dots) - "Standard" only

30
15
X
31

30
15
X
31

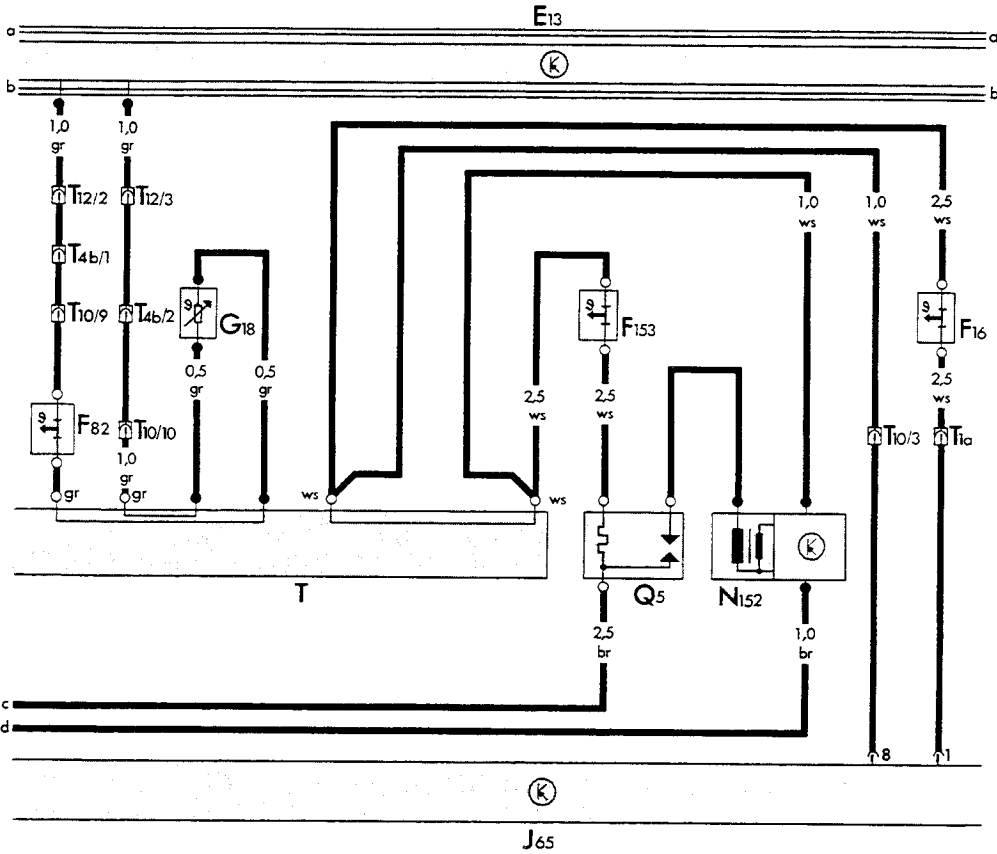


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = violet
ge = yellow

- E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part
 F16 – Heater Flame Sensor
 F82 – Temperature Limiting Switch, in heater
 F153 – Glow Plug Thermal Switch
 G18 – Temperature Sensor II
 J65 – Heater Control Module, below driver's seat*
 N152 – Ignition Coil
 Q5 – Glow/Spark Plug
 T – Junction Box
 T1a – Single Connector, below driver's seat*
 T4b – 4-Pin Connector, below driver's seat*
 T10 – 10-Pin Connector, below driver's seat*
 T12 – 12-Pin Connector, behind left B-pillar trim, upper part

* – Located behind lower part of left B-pillar trim on vehicles with swivel seat

97-10045

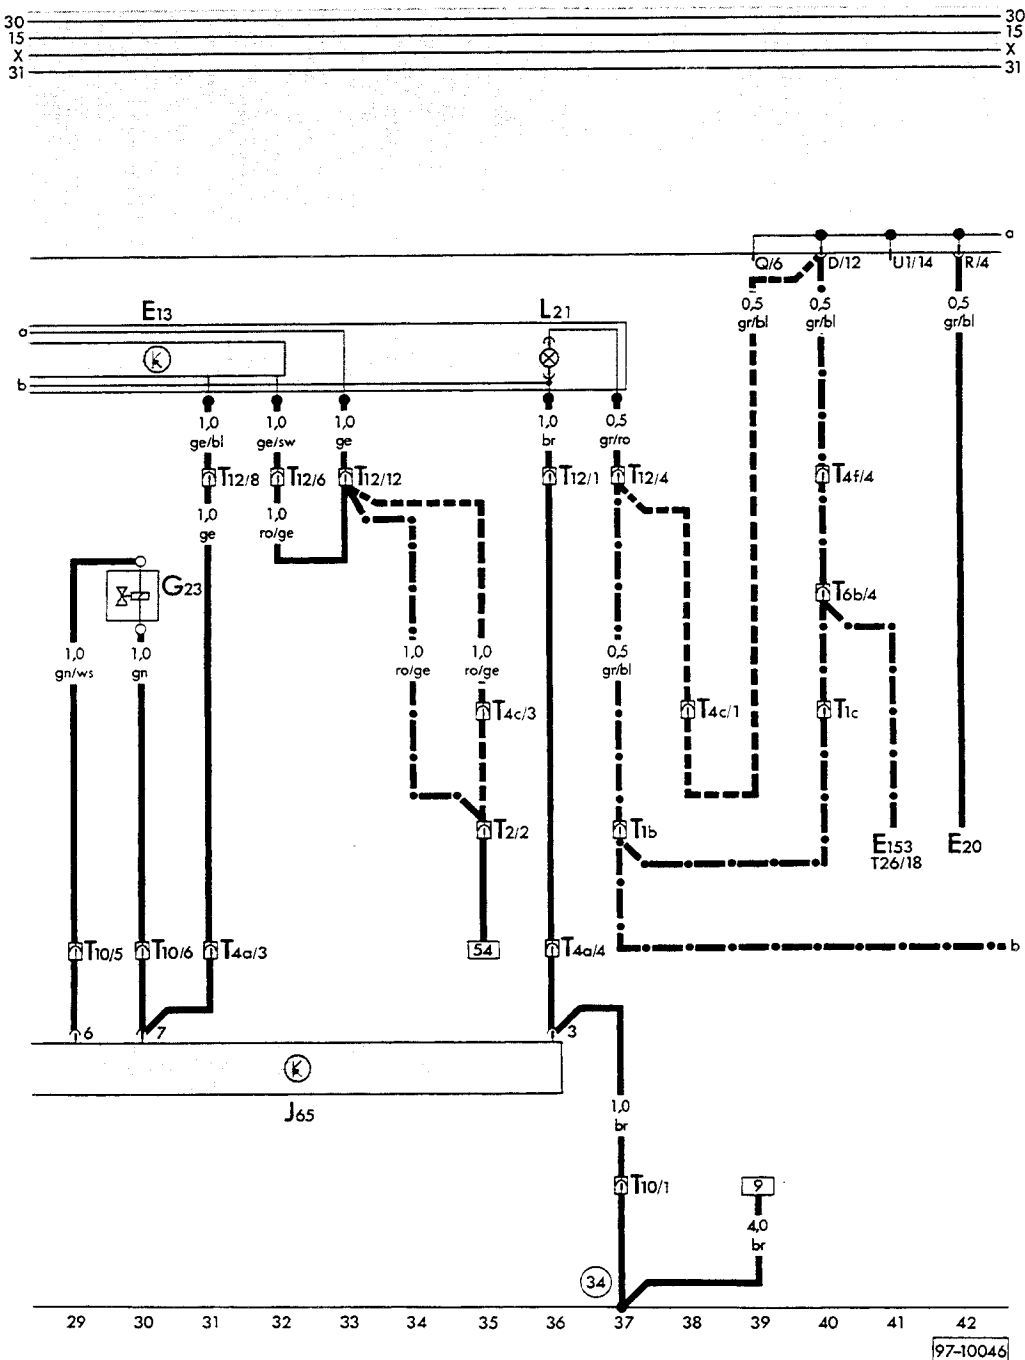


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part
- E20 – Instrument Panel Light Dimmer Switch
- E153 – Camper Central Electronic Display (Camping Equipment), near front interior light
- G23 – Transfer Fuel Pump (FP)
- J65 – Heater Control Module, below driver's seat*
- L21 – Heater Control Lever Light
- T1b – Single Connector, below driver's seat
- T1c – Single Connector, behind left B-pillar trim, lower part
- T2 – Double Connector, below driver's seat*
- T4a – 4-Pin Connector, below driver's seat*
- T4c – 4-Pin Connector, below driver's seat*
- T4f – 4-Pin Connector, behind fuse/relay panel
- T6b – 6-Pin Connector, on left A-pillar, upper part

- T10 – 10-Pin Connector, below driver's seat*
- T12 – 12-Pin Connector, behind left B-pillar trim, upper part
- (34) – Ground connection, below driver's seat*
- * – Located behind lower part of left B-pillar trim on vehicles with swivel seat
- – "Camper" only
- — — – "Standard" only

97-10046

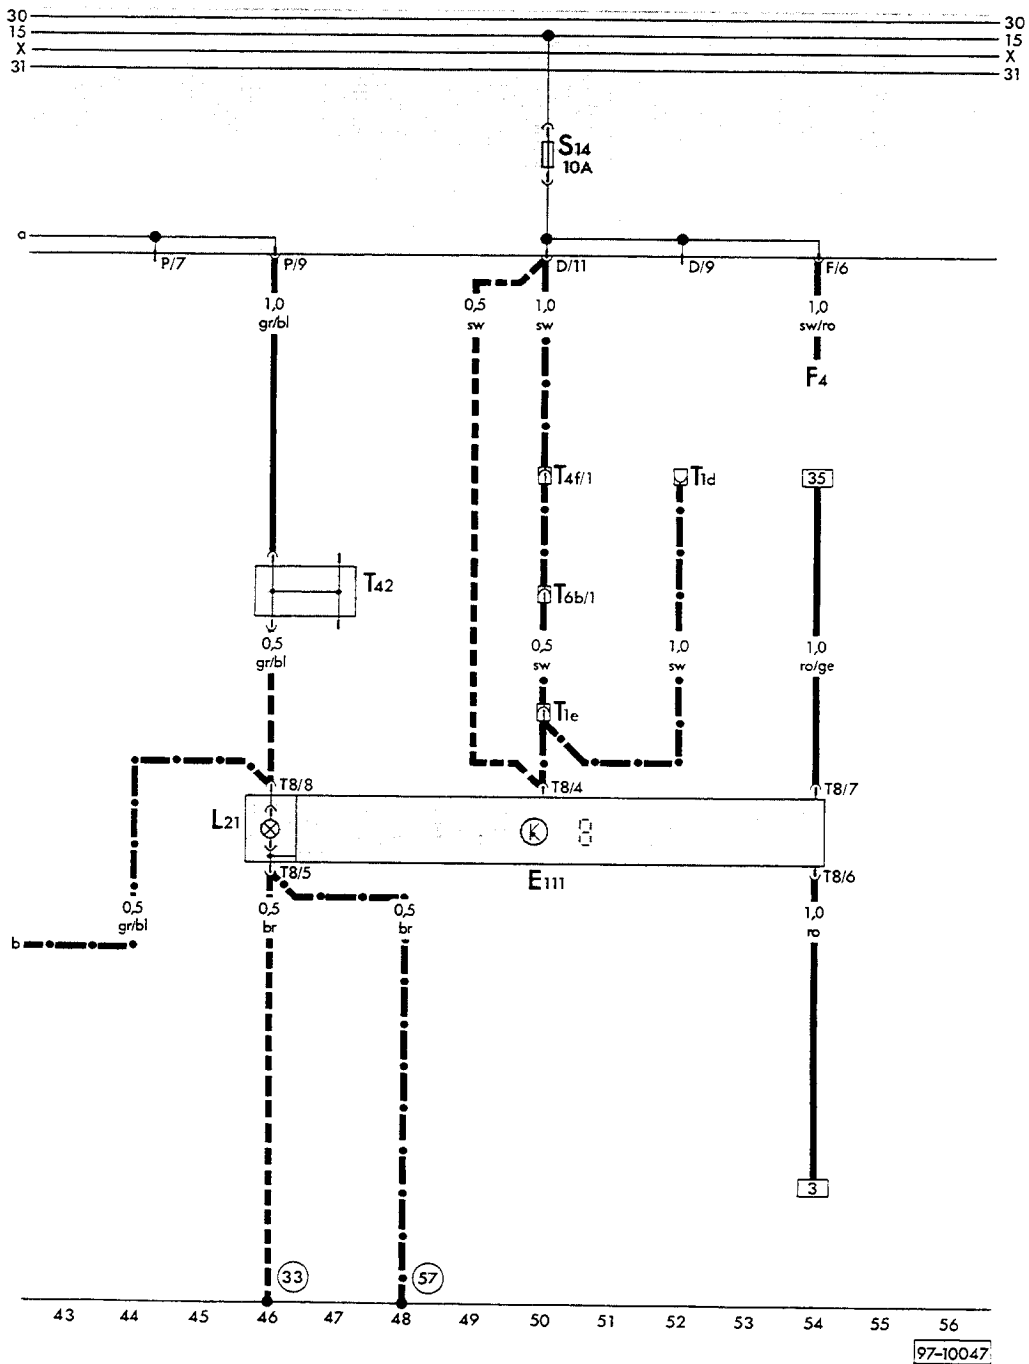

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = violet
ge = yellow

- E111 – Programmable Timer, in instrument panel, center
F4 – Back-Up Light Switch
L21 – Heater control Lever Light
T1d – Single Connector, on B-pillar, left
T1e – Single Connector, on B-pillar, left
T4f – 4-Pin Connector, behind fuse/relay panel
T6b – 6-Pin Connector, on left A-pillar, upper part
T8 – 8-Pin Connector
T42 – Wire Connector, Terminal 58B, above fuse/relay panel

—●— — "Camper" only
—■— — "Standard" only

- 33 – Ground connection, behind instrument panel, right
57 – Ground connection, on left rear pillar